

# Device Link for Chromebook

## Quick-Start Guide 1

### Station Setup

#### What You Need:

- 1 x internet connection, Wi-Fi or ethernet (for target Chromebook)
- 1 x internet connection, Wi-Fi or ethernet (for Device Link)
- HDMI monitor (needed for setup, optional for processing)
- USB mouse and keyboard (needed for setup, optional for processing)
- 1 x Chromebook target with its own power supply

#### Good to Know:

- Device Link operates as an Internet-connected appliance. Licensing and reporting functions occur with direct communication to the Ziperase [Customer Portal](#).
- Device Link supports 64-bit Chromebooks and Chromeboxes produced after 2015 supporting USB-C
- All units report completed activities directly to the cloud, where they are aggregated with reports from all of your other Device Link stations
- Licensing is managed entirely in the [Customer Portal](#), transparently to the operator.
- Our support team is here to help! Email us at [support@ziperase.com](mailto:support@ziperase.com) or fill in [this form](#) to create a ticket for technical support.
- Check for software updates in the [Customer Portal](#) Downloads tab

# Cables and Connections You'll Need

## 1. Device Link USB-C Power Adapter



## 2. Video Out (plugs into standard HDMI port)



## 3. USB-C to Gigabit Ethernet Adapter (optional)



## 4. HDMI D (micro-HDMI) to HDMI A (standard HDMI)



## 5. USB2 Cable (USB-A to USB Micro-B)



## 6. USB1 Cable (USB-A to USB-C)



## 7. USB C Multi-Port Adapter



## What's in the Box?

### 11. Device Link Unit



## Setting Up

- Unbox Device Link and connect cables and peripherals to the Device Link unit



**1** Device Link USB-C Power Adapter


**2** HDMI D (micro-HDMI) to HDMI A (standard HDMI)

**4** Video Out (plugs into standard HDMI port)

**5** USB1 Cable (USB-A to USB-C)

**6** USB2 Cable (USB-A to USB Micro-B)

## Setup Diagram:

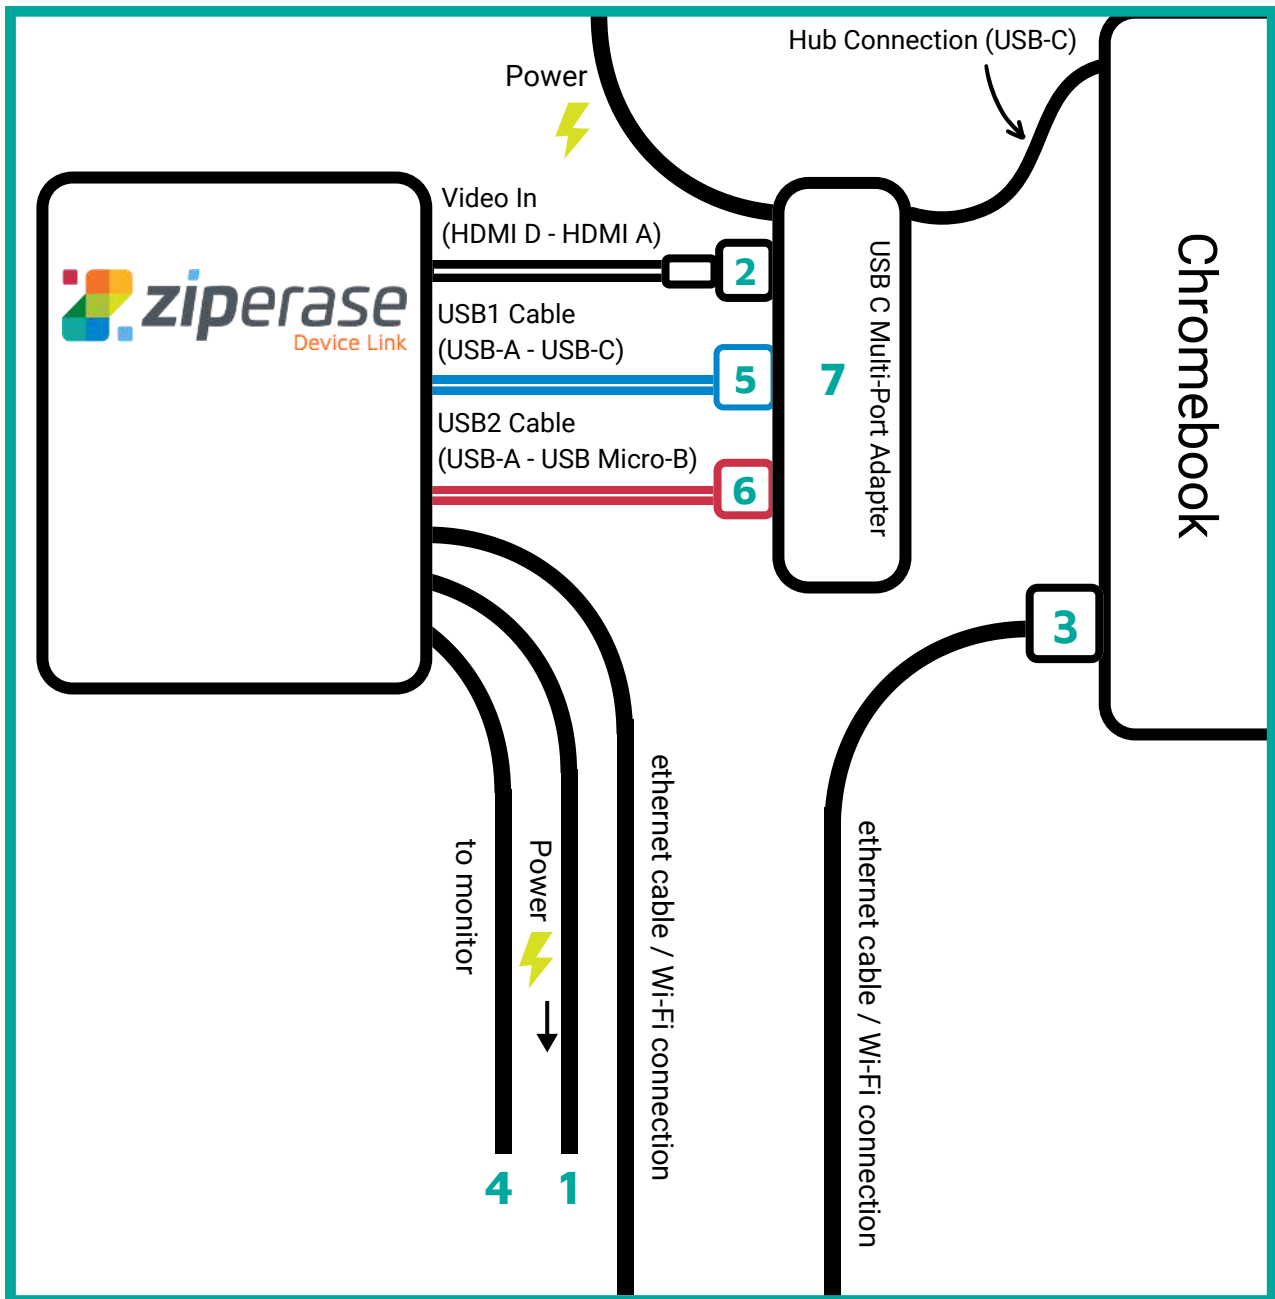

- |  |  |
|--|--|
| <b>1</b> Device Link USB-C Power Adapter               | <b>4</b> Video Out (plugs into standard HDMI port) |
| <b>2</b> HDMI D (micro-HDMI) to HDMI A (standard HDMI) | <b>5</b> USB1 Cable (USB-A to USB-C)               |
| <b>3</b> USB-C to Gigabit Ethernet Adapter (optional)  | <b>6</b> USB2 Cable (USB-A to USB Micro-B)         |
|  | <b>7</b> USB C Multi-Port Adapter                  |